
Spare Parts List S Pumps

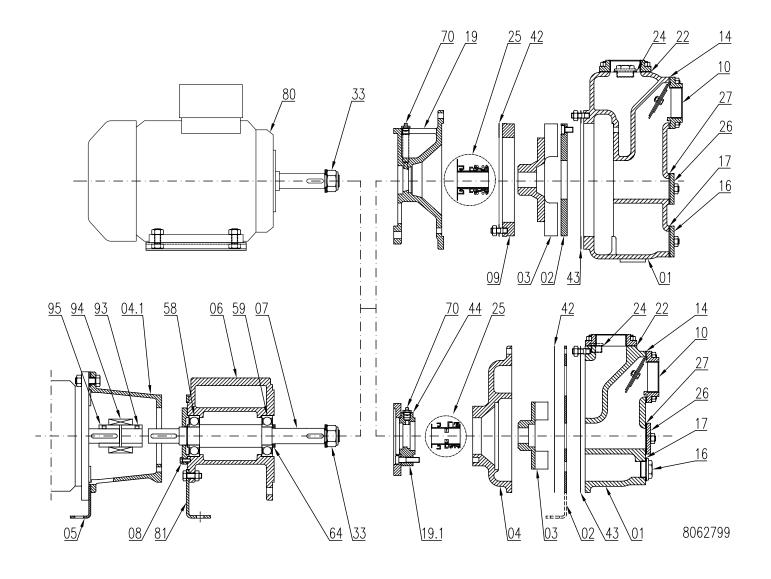

Ref.	Part Name
01	Casing
02	Wear Plate
03	Impeller
04	Volute
04.1	Bracket
05	Foot, Bracket
06	Bearing Housing
07	Shaft
08	Bearing Cover
09	Wear Plate rear (with 42)
10	Suction Flange
14	Check Valve
16	Drain Cover or Plug
17	Gasket (Drain)
19	Head
19.1	Seal Box
22	Gasket, Discharge Flange

S

Ref.	Part Name
24	Gasket (Priming)
25	Mechanical Seal
26	Clean Out Cover
27	Gasket (Clean Out)
33	Nut, Impeller
42	Gasket, Volute
43	Gasket, Casing
44	Gasket, Seal Box
58	Ball Bearing, outer
59	Ball Bearing, inner
64	Sleeve, inner
70	Grease Lubricator
80	Electric motor (with 33)
93	Coupling Half
94	Rubber Part
95	Coupling Half
	Gasket Set (with14,17,22,27,42,43)

www.bedu.eu